**LUBRICATION ORDER** 

# LO 5-2805-213-12

5 June 1989

(Supersedes LO5-2805-213-12, 11 March 1977)

# ENGINE, GASOLINE: 14 HP, (MILITARY STANDARD MODEL A042)

References: TM 5-2805-213-14 AND FEDERAL SUPPLY CATALOG C9100-IL

Intervals and related task-hour times are based on normal hours of operation. The task-hour time specified is the time you need to do all the services prescribed for a particular interval. Change the interval if your lubricants are contaminated or if you are operating the equipment under adverse operating conditions, including longer-than-usual operating hours. You may extend the interval during periods of low activity, but you must take adequate preservation precautions.

\* The time specified is the time required to perform all services at the particular interval.

Clean fittings before lubricating. Relubricate all areas exposed to water after amphibious operation. Lubricate points indicated by dotted arrow shaft on both sides of equipment. Clean parts with SOLVENT, dry cleaning, or with OIL, fuel, diesel. Dry before lubricating. Drain crankcases when HOT. Fill and check level. The lowest level of maintenance authorized to lubricate a point is indicated by one of the following: (C) operator/crew, or (O) organizational maintenance.


You can improve this publication by calling attention to errors and by recommending improvements and by stating your reasons for the recommendations. Your letter or DA Form 2028 (Recommended Changes to Publications and Forms) should be mailed directly to Commander, U. S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Blvd., St. Louis, MO. 63120-1798. A reply will be furnished directly to you.

LUBRICANT . INTERVAL

INTERVAL . LUBRICANT

Crankcase Drain Plug (O)
(Drain and refill)

Magneto Cam Wick (0) (Sparingly) (See note 5)

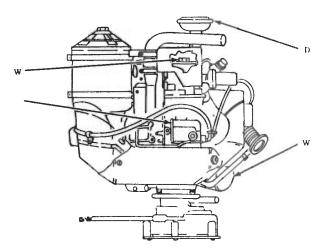

OE/ Crankcase Oil Fill HDO and Level Gage (See key) (Check level) (C)

CAUTION: When OEA
Oil is used the level
will be checked more
often.

Oil Filter
(Disassemble entire
unit, clean housing,
renew element and
reassemble)
(See note 3)

#### \*TOTAL TASK HOURS

INTERVAL TASK-HOURS

D 0.5

W 1.5

| LUBRICANTS              |                            | CAPACITY                  | EXPECTED TEMPERATURES     |                                  |              | 207       |                                         |
|-------------------------|----------------------------|---------------------------|---------------------------|----------------------------------|--------------|-----------|-----------------------------------------|
|                         |                            |                           | Above + 32°F<br>Above 0°C | +40°F to -10°F<br>+ 5°C to -23°C |              | 0 TM 9    | INTERVALS                               |
| OE/HDO<br>(MIL-L-2104C) | LUBRICATING<br>OIL, ENGINE |                           |                           |                                  |              | EFER T    | D. 8 Hours                              |
| OE/HDO<br>(MIL-L-2104C) | CRANKCASE                  | 2-1/8 QT.<br>(2.0 LITERS) | 0E/HD0 30                 | 0E/APG-PD-1                      | OEA/APG-PD-1 | ATION R   | or daily<br>W- 50 hours<br>or weekly    |
| OE/HDO<br>(MIL-L-2140C) | OIL CAN<br>POINTS          |                           |                           | ***                              | 1000 May 50  | COPER     | 300 S S S S S S S S S S S S S S S S S S |
| OEA/APG-PD-1            | OIL, ENGINE,<br>SUB-ZERO   |                           |                           |                                  |              | FOR ARTIC |                                         |

## NOTES:

- 1. FOR OPERATION OF EQUIPMENT IN PROTRACTED COLD TEMPERATURES BELOW -10°F (-23°C). Remove lubricants prescribed in the key for temperature above -10°F (-23°C). Clean parts with SOLVENT, dry-cleaning. Relubricate with lubricants specified in the key for temperatures below -10° (-23°C).
- 2. OIL CAN POINTS. Every 25 hours lubricate all exposed adjusting threads with OE/HDO.
- OIL FILTER. Every 50 hours remove filter element, clean housing, install new element, fill crankcase, operate engine for five minutes, check for leaks, check crankcase oil level, and bring to full mark.
- 4. LUBRICANTS. The following is a list of lubricants with the Military Symbol and applicable Specification numbers:

**OE/HDO MIL-L-21404C** 

OEA/APG-PD-1

Insure cam wick is lubricated with OE/HDO (sparingly) whenever ignition contact points are replaced or adjusted. By Order of the Secretaries of the Army:

CARL E. VUONO General, United States Army Chief of Staff

Official:

WILLIAM J. MEEHAN, II Brigadier General, United States Army The Adjutant General

### DISTRIBUTION:

To be distributed in accordance with DA Form 12-25A, Operator and Unit Maintenance Requirements for Engine, Gasoline, 14 HP, Model A042.